

## AT-CUM-6 Open-ended cable for analog and TTL preamplifiers

## Pin assignments

Pin:	Used for [Color]:
1	TTL signal output (center conductor of co-axial cable)
2	Not used
3	Positive supply voltage [Red]
4	Not used
5	Not used
6	Signal ground (shield of co-axial cable)
7	Supply voltage ground [Green]
8	Negative supply voltage [Black]
9	Analog signal output (center conductor of co-ax cable)